




VACCURATE VACUUM GENERATOR OPERATING INSTRUCTIONS

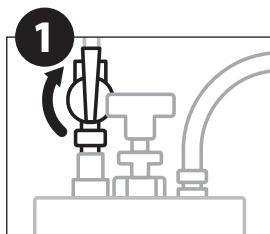


Turn flask tap to vertical position (ON)

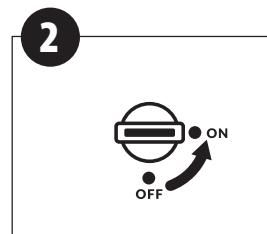


Turn ON vaccurate air switch

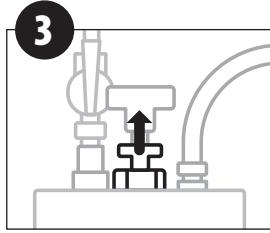


Lift seal on flask to draw up chemical under vacuum

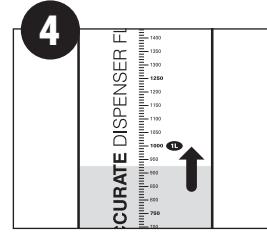

Measure chemical to correct volume

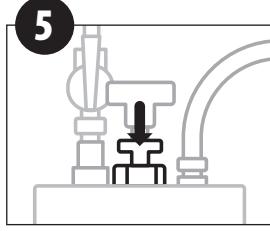

Release valve to break vacuum seal

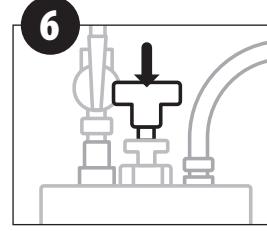

Depress spring on drain valve to release measured chemical

